
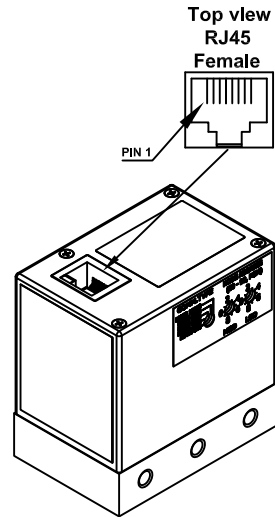


Pin table	Pin 1	Pin 6
RS-232	TX-RS-232	RX-RS-232
Modbus	RS-485 (+) D0 Modbus (A/A')	RS-485 (+) D1 Modbus (B/B')

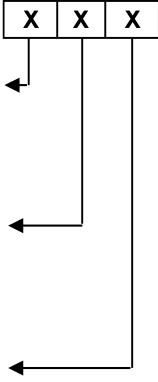

Explanation code P.C. board

A	RS-232 / RS-485	Normally Closed (NC)	
A	Output / setpoint	0 - 5Vdc	
B	Output / setpoint	0 - 10Vdc	
F	Output	0 - 20mAdc sourcing	
F	Setpoint	0 - 20mAdc sinking	
G	Output	4 - 20mAdc sourcing	
G	Setpoint	4 - 20mAdc sinking	
D	+15Vdc...+24Vdc power supply		

For available bus protocols over RS-485 see instruction manual IQ+ FLOW (9.17.045)

Application stand alone

It is also possible to connect the IQMx with a Bronkhorst plug-in power supply (7.03.424)
For information and specifications of this power supply visit the Bronkhorst website.